




# GENUINE PARTS


## INSTALLATION INSTRUCTIONS

1. **DESCRIPTION:** Front Splash Guard Kit
2. **APPLICATION:** 370Z
3. **PART NUMBER:** 999J2 ZVxxx03
4. **KIT CONTENTS:**

Item	QTY	Description	Part Number
A	1	Splash Guard – Front Right	---
B	1	Splash Guard – Front Left	---
C	4	Screw	14-51 00891
D	2	Push Pin	11296 AG000
E	1	Installation Instructions <a href="#">Replacement Template</a>	999V2 AW000

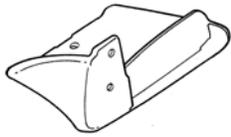

A

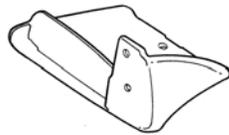

B



C



D



E

### 5. TOOLS REQUIRED:


- clean, lint-free wiping cloth
- mild soap/water mixture or isopropyl alcohol
- #2 phillips screwdriver
- awl
- drill
- 2mm (3/32") drill bit
- 5mm (3/16") drill bit
- 8mm (5/16") drill bit

### 6. PRE-INSTALLATION NOTES:


- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

# INSTALLATION INSTRUCTIONS - Front Splash Guard Kit

## 7. INSTALLATION PROCEDURE:

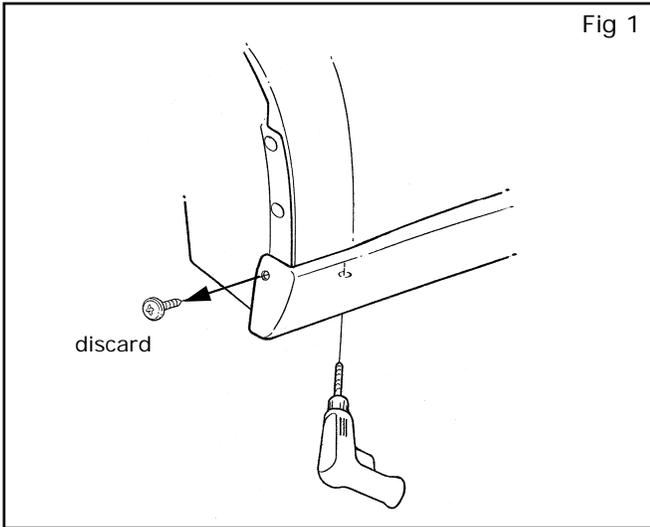

- 1) Remove existing fasteners.
  - a) Remove and discard screw.
  - b) Drill out rivet with 5mm (3/16") bit.
  - c) Enlarge hole for push pin with 8mm (5/16") bit.
  - c) Clean installation surface.

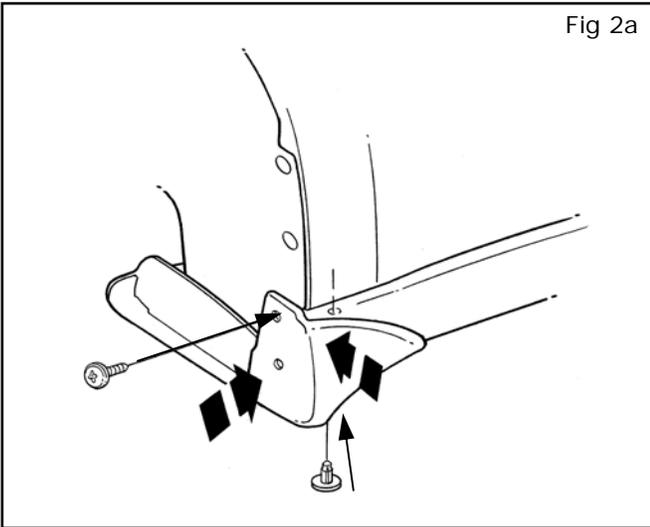


- 2) Install front splash guard.
  - a) Align splash guard to vehicle.
  - b) Install supplied push pin in lower underside hole.
  - c) Install supplied screw in top hole, while holding part up and into body panel.

**DO NOT OVER TIGHTEN SCREW**

### NOTE:


**HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.**

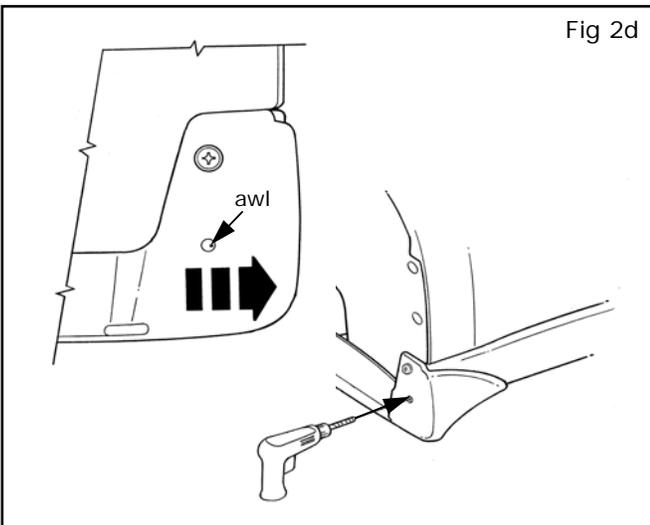

- d) Pull outward on splash guard to close any gap to rocker panel and mark outboard edge of hole with awl.
- e) Drill a 2mm (3/32") pilot hole.

## INSTALLATION INSTRUCTIONS - Front Splash Guard Kit

Fig 2f

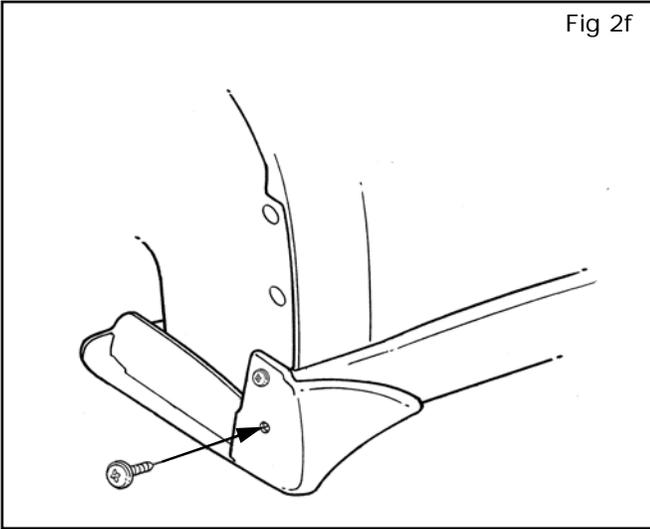

- f) Install supplied screw.  
**DO NOT OVERTIGHTEN**